


# **Manual for controller KHD-Advance 9SET000700**



## Content

1. Description
2. Main page
3. Values I/O
4. Menu
5. Settings HW
6. Information
7. Log in
8. Parameters
9. Alarms
10. Alarms – History
11. ModBus values

## 1. Description

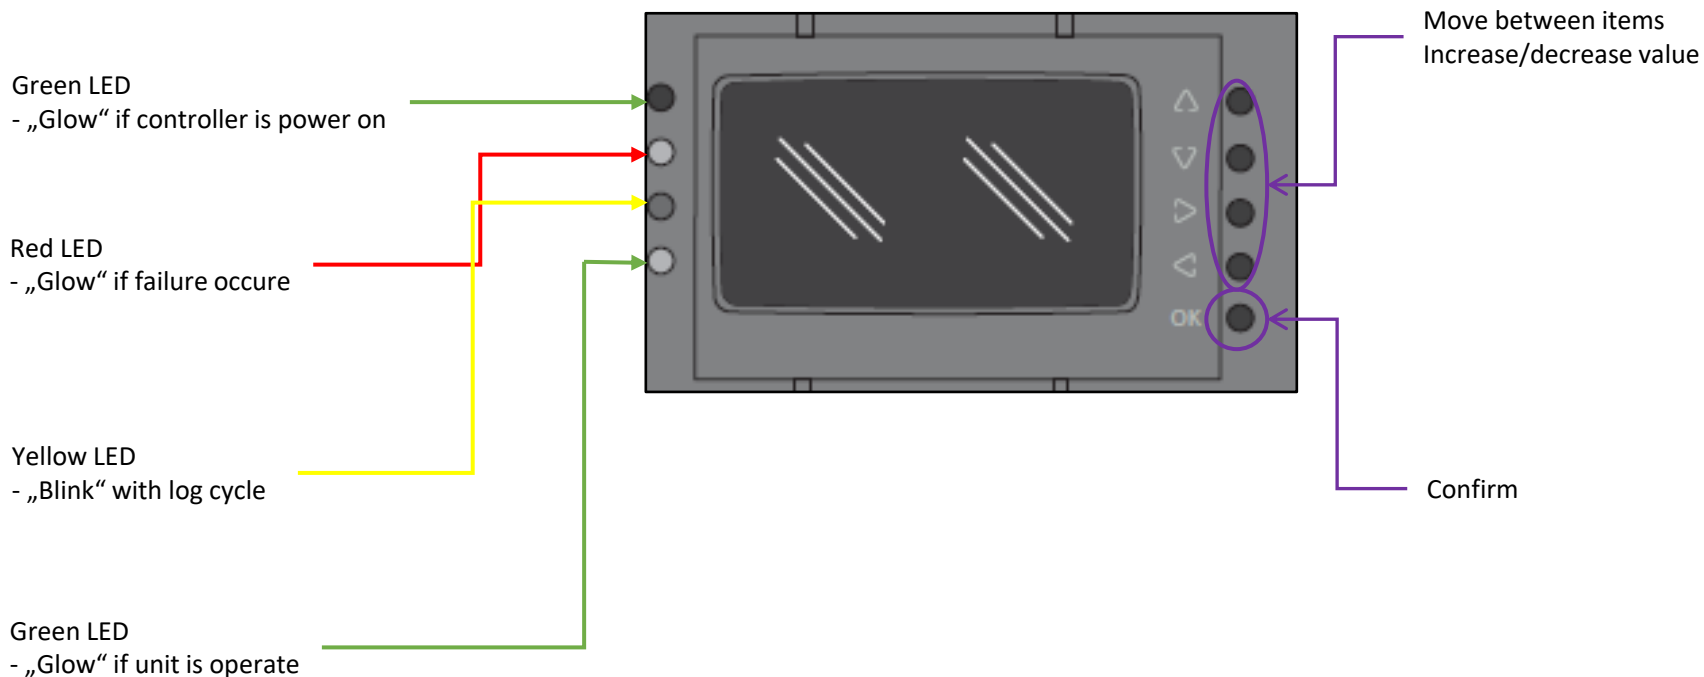


## Program description

PLC device control cooling unit inside AHU according the request from control system and parameters values. It measure compressors discharge temperature and pressure in the heat exchangers. If the 4-way valve is used, it can be switched in reverse operation depending on season time. Additional information about cooling unit is in user manual. Defrost is automatically switched on if the limit of the evaporating temperature is under 4°C. Around that temperature the evaporators freeze and ice is forming. Defrost cycle is necessary. Defrost can be controlled in time cycles. Cooling unit is limited by evaporating temperature as ice protection. If the evaporating temperature setpoint is reached, the PLC decreasing unit capacity. Next protection function is to hold condensing temperature under compressors limits. If the pressure overtake that setpoint, capacity of the unit is decreasing, until the pressure is in the limits. Capacity limitation is signaled by relay. Value of the limitation is signaled by analog values 0-10V.

Regulation starts after closing contact –KA7. Capacity is controlled by analog input 0-10V. Operation of the unit is signaled by relays contacts. One for running and one for failure. The unit is fitted with few protection devices and protect cooling unit again damage (pressure switches, discharge temperature).

2. Main page

Information page. Enter pages Menu.

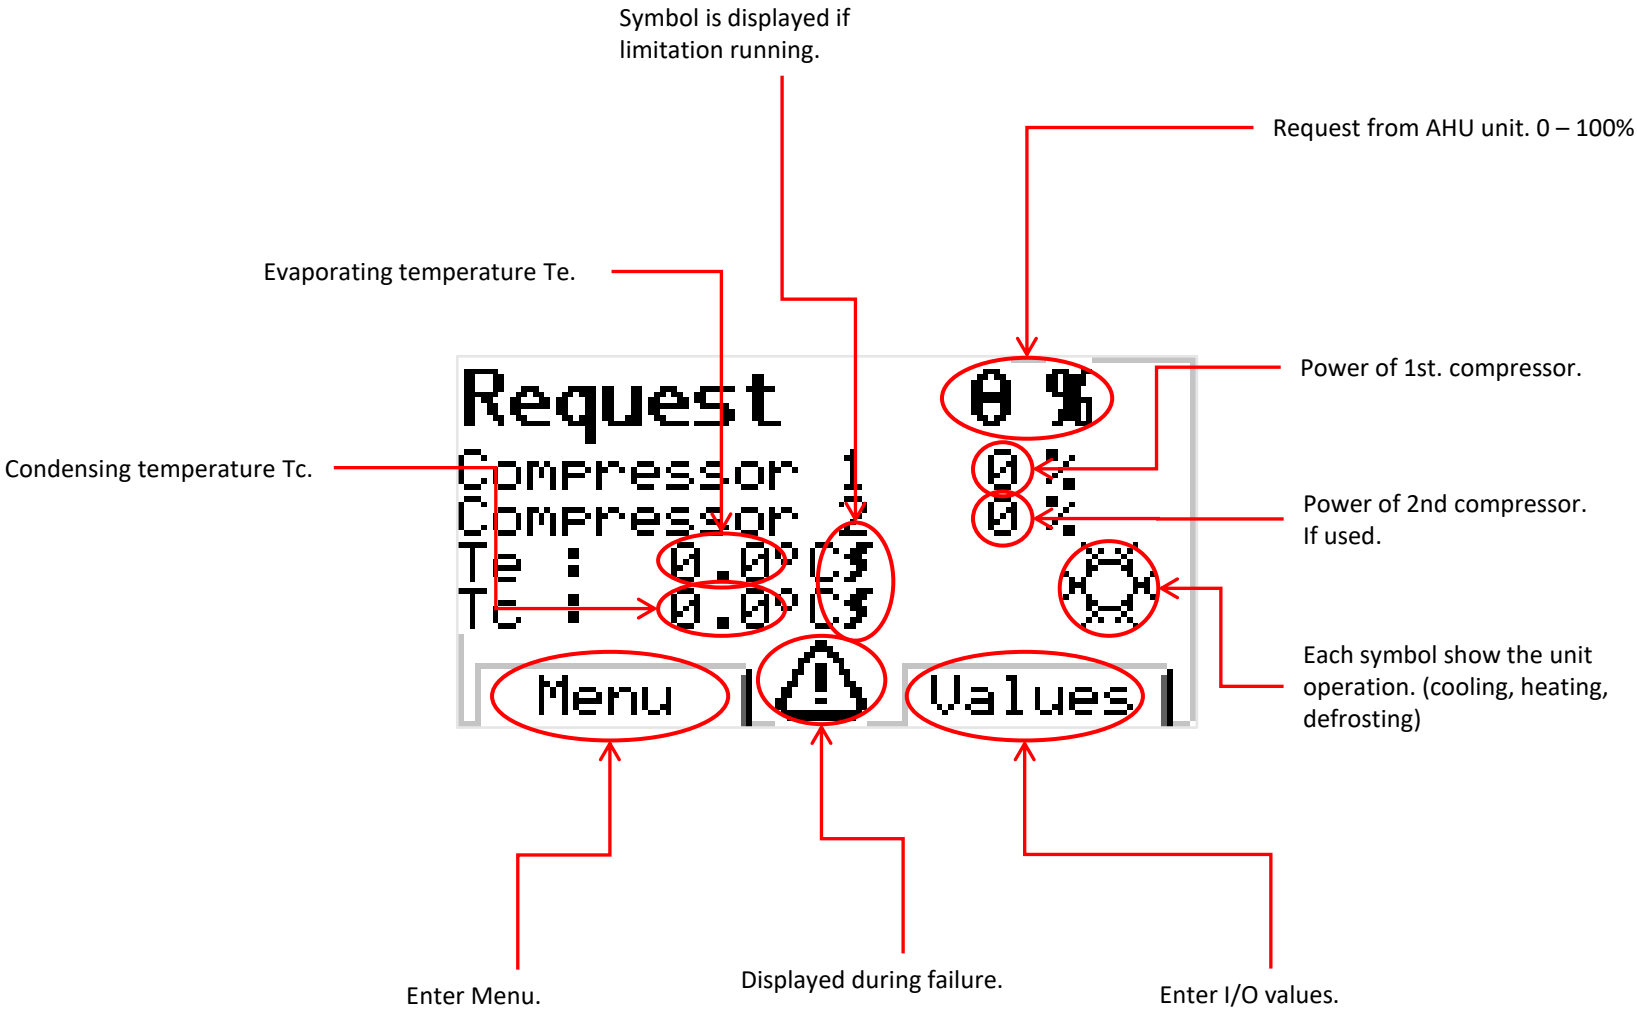


### 3. Values I/O


*Information about inputs and outputs.*


Digital I/O			
DI1	0	DO1	0
DI2	0	DO2	0
		DO3	0
		DO4	0
		DO5	0
		DO6	0

Analog I/O			
AI1	0.0Bar-g		
AI2	0.0Bar-g		
AI3	0	AI7	0.00 U
AI4	0	AI8	0.0 U
AI5	0	AO1	0.00 U
AI6	0.0°C	AO2	0.00 U

- Digital inputs (DIx): 0 = open, 1 = close
- Digital outputs (DOx): 0 = open, 1 = close
- Analog inputs (AIx): AI3,AI4,AI5 = DI
- Analog outputs (AOx): Outputs voltage


Back


Next page


Previous page

## 4. Menu

*Menu page.*




Settings – HW settings of PLC (Ethernet/RS485)

Info – Information about compressors

Login – Enter to login page. If right password was insterted,  
the button is changed to „Param“



Param – Parameters for all functions

Alarms – Failure and warnings

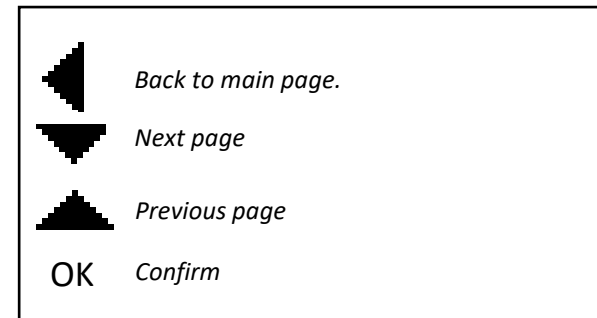

## 5. Settings - HW

*HW settings menu.*

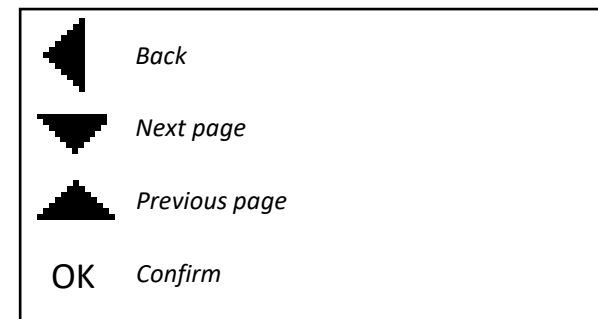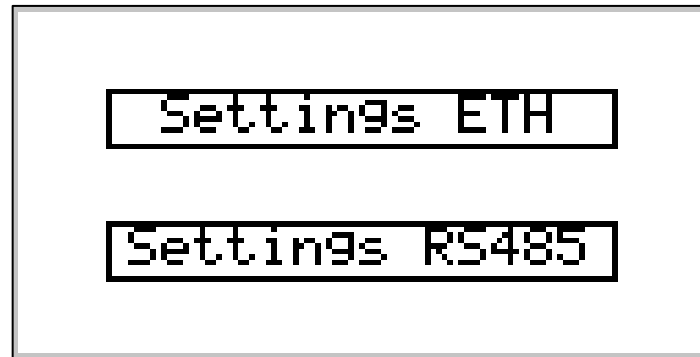





## 5. Settings HW - Ethernet

*Pages for change ethernet settings.*

<p><b>IP adress</b></p> <div> <div>0</div> <div>0</div> <div>0</div> <div>0</div> </div> <div> <div>&lt;-</div> <div>-&gt;</div> </div>	<p><b>IP mask</b></p> <div> <div>0</div> <div>0</div> <div>0</div> <div>0</div> </div> <div> <div>&lt;-</div> <div>-&gt;</div> </div>	<p><b>GateWay</b></p> <div> <div>0</div> <div>0</div> <div>0</div> <div>0</div> </div> <div> <div>&lt;-</div> <div>-&gt;</div> </div>
<p><b>Primary DNS</b></p> <div> <div>0</div> <div>0</div> <div>0</div> <div>0</div> </div> <div> <div>&lt;-</div> <div>-&gt;</div> </div>	<p><b>Secondary DNS</b></p> <div> <div>0</div> <div>0</div> <div>0</div> <div>0</div> </div> <div> <div>&lt;-</div> <div>-&gt;</div> </div>	<p><b>Ports</b></p> <div> <div>Com</div> <div>0</div> </div> <div> <div>HTTP</div> <div>0</div> </div> <div> <div>&lt;-</div> <div>-&gt;</div> </div>


- Parameters for ethernet communication.
- For apply changes, power cycle is necessary.

	<i>Bak to menu/Previous page</i>
	<i>Next page</i>
	<i>Next item/decrease value</i>
	<i>Previous item/increase value</i>




## 5. Settings HW - RS485

Obrazovka pro změnu nastavení linky RS485.

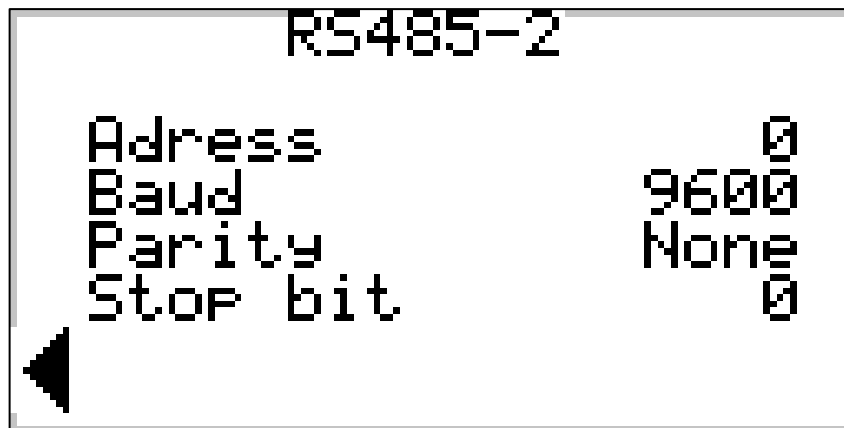


- Parameters for RS485 line (ModBus/RTU).
- For apply changes, power cycle is necessary.

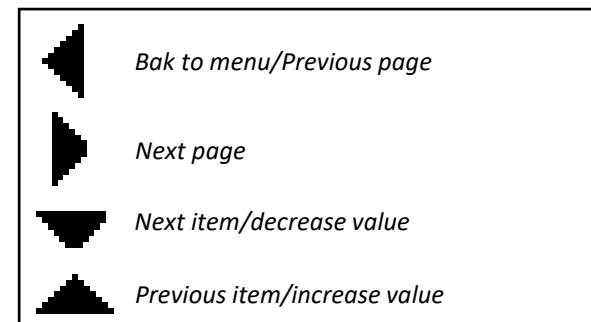


## 6. Information

*Menu for compressor information.*

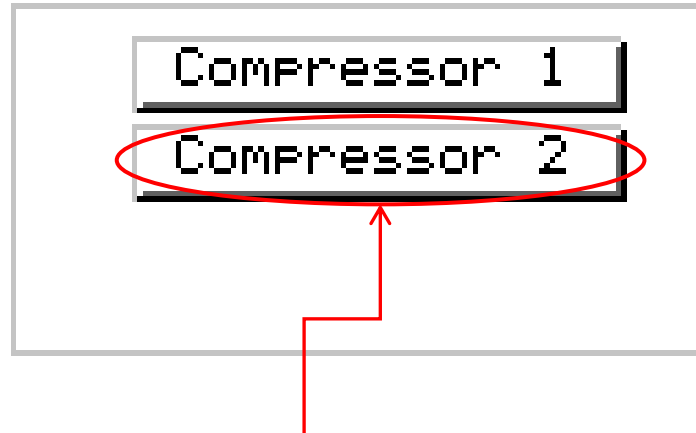


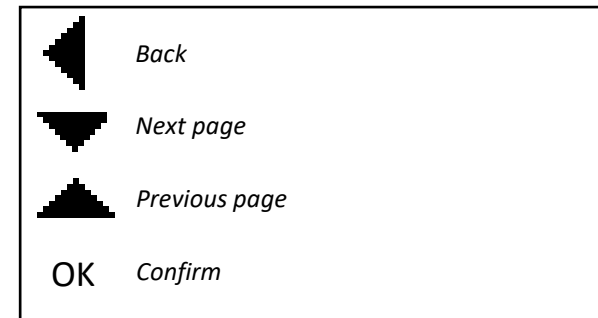


It is displayed if the 2nd compressor is used.



## 6. Information

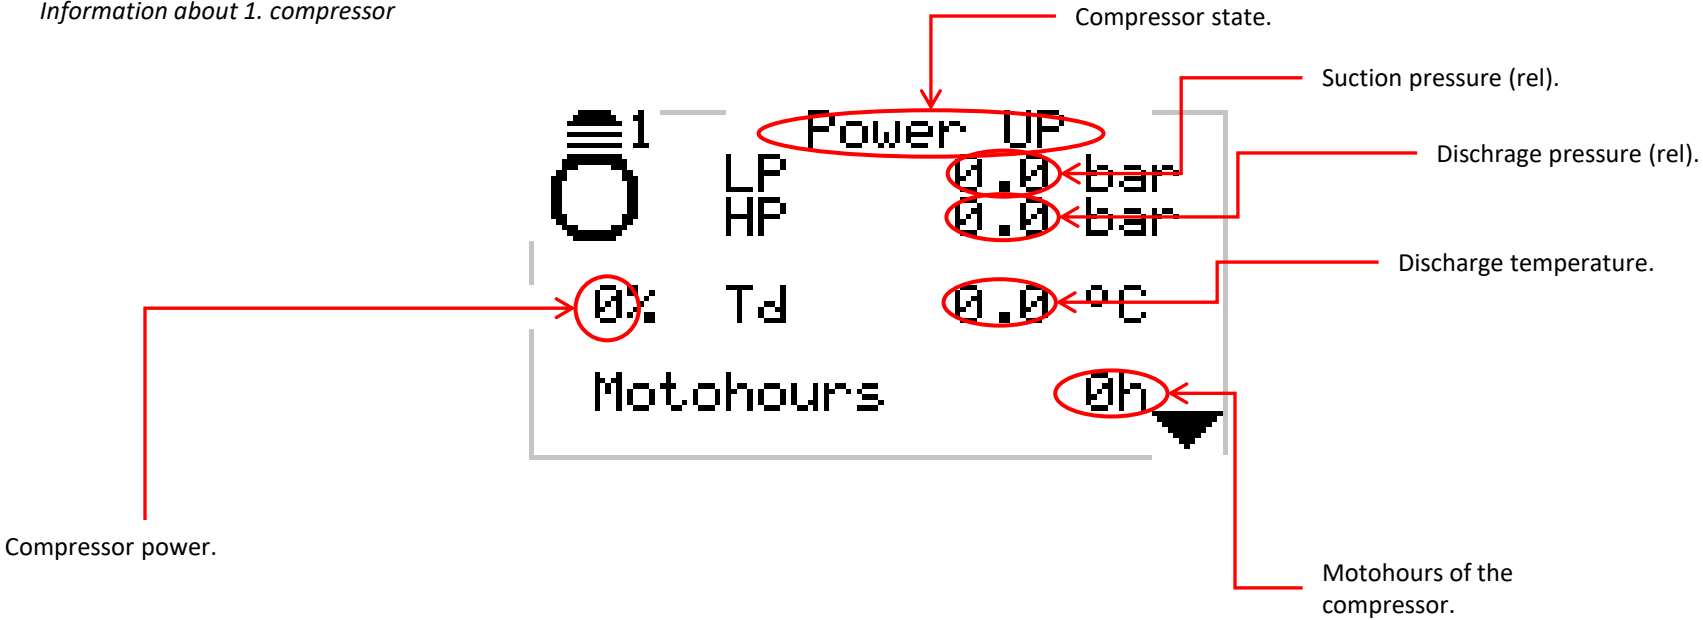Information about 1. compressor



	Close
	Next page
	Close
OK	Confirm

# 6. Information

Information about 1. compressor

Compressor 1	
LP failures	0
HP failures	0
LP probe failures	0
LP limitation	0%
HP limitation	0%

Number of failures for each protection.

Limitation according to evaporating or condensing temperature.  
0% = no limitation.



Next page




Previous page

OK

Confirm


## 6. Information

*Information about 1. compressor*

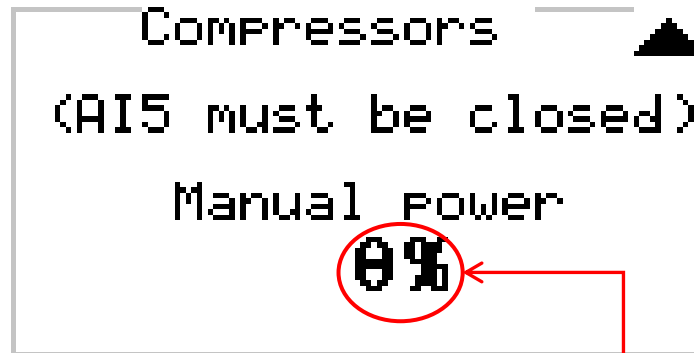


Manual control. Value -1 mean automatic regulation. Value from 0 to 100 determines requested power.


- If more then 1 compressor is used, that value is all unit capacity.
- After restart, the value is -1.

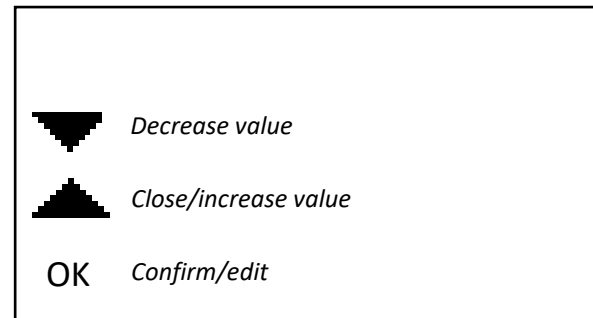


# 6. Information

Information about 2. compressor. If used.

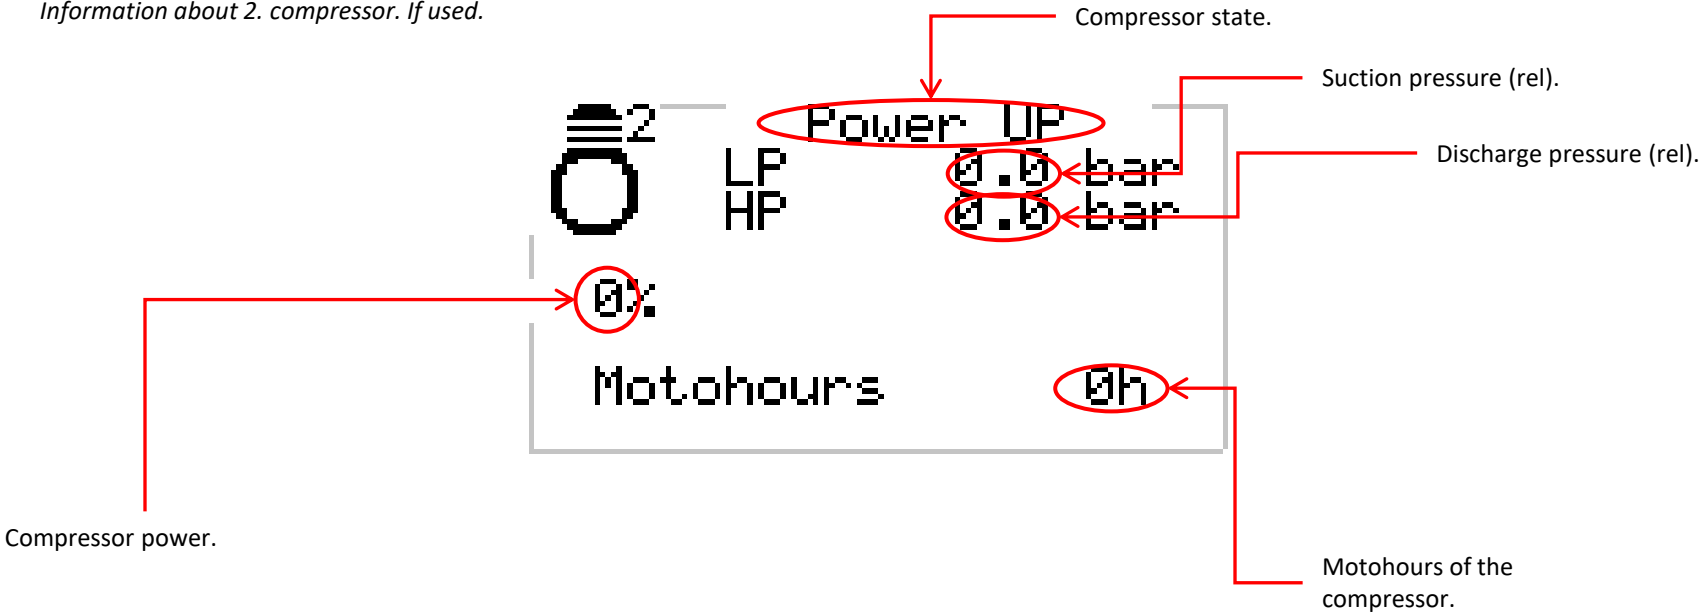

 *Close*

 *Close*

*OK* *Confirm*


## 7. Login

*To change parameters, the login is necessary. Default password is 1.*




Displaying : unlock/lock

*After 10 minutes, automatic log off is performer.*

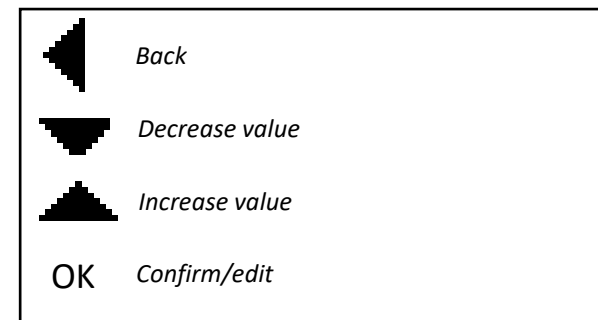


## 8. Parameters

*Parameters menu.*

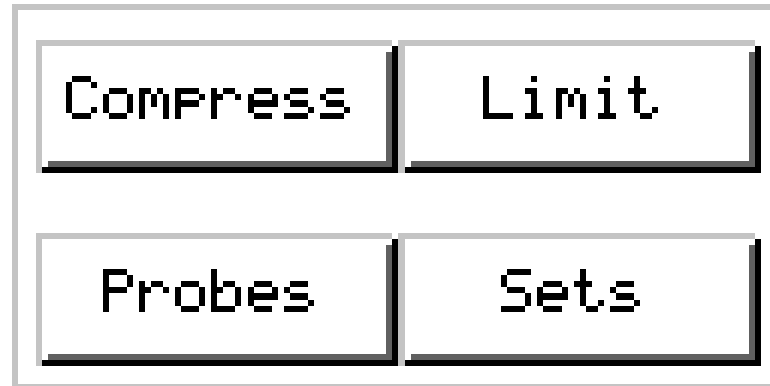

- Menu for entering requested function.

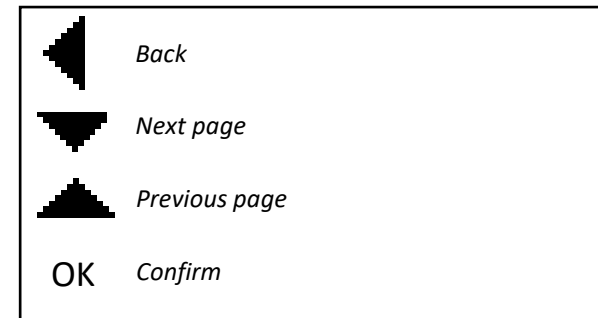



## 8. Compress – Compressor parameters

Name	Min	Max	Default	Description
Hyst. UP	5	20	20 %	Hysteresis of control signal for start the cooling.
Hyst. DOWN	0	10	10 %	Hysteresis for turning off from control signal.
Refrigerant	0	17	R407C	Type of refrigerant.
SET_Td_HAL	90,0	140,0	120,0 °C	Maximum of discharge temperature. Limit for shut off.
Filter T	0	1000	100 s	Decreasing reaction from fast changes of probes value.
Polarity_AL	No	Yes	Yes	Polarity of alarm relay (Yes = open during alarm, No = close during alarm)
Comp_Tpwm	10	20	10 s	Period of switching bypass valve for 1st compressor.
Pen_HP	3	10	3	Maximal HP failures to locked state during period Pei.
Pei_HP	15	60	15 m	Time for counting HP failures.
Pen_LP	3	10	3	Maximal LP failures to locked state during period Pei.
Pei_LP	15	60	15 m	Time for counting LP failures.
Pen_LP_Pr	3	10	3	Maximal LP probe failures to locked state during period Pei.
Pei_LP_Pr	15	120	15 m	Time for counting LP probe failures.
ByypassT_LP	0	6000	30 s	Bypass time for Low presostate after compressor starts.
OverT_LP	0	600	4 s	Filter time for Low presostate during compressor run.
ByypassT_LPP	0	6000	60 s	Bypass time for LP probe failure after compressor starts.
OverT_LPP	0	60	120 s	Filter time for LP probe failure during compressor run.
Comp_Tinc	10	600	60 s	Delay start of 2nd compressor. (if used)
Comp_Tdec	0	120	10 s	Delay stop of 2nd compressor. (if used)
Defrost T	0	600	15 m	Defrost time. If defrost is proceeding according parameters below.
Defrost I	0	900	6 h	Interval between defrost cycles. If it is enabled.
Defrost Te	-20,0	15,0	4,0 °C	Limit for enabling defrosting from evaporating limitation setpoint.
Max_Power	No	Yes	No	Service parameter. If „Yes“ unit run on 100%. (unit must be on from digital input)
Comp_Ton	5	120	30	Minimal compressor run time.
Comp_Toff	30	300	90	Minimal off time of the compressor.
Application	-3	3	1	Choose application.

```

Hyst_UP      0%
Hyst_DOWN    0%
Refrigerant  R404A
SET_Td_HAL   0.0°C
Filter T      0
Polarity AL   No
  
```

```

Comp_Tpwm    0s
PEN_HP       0
PEI_HP        0m
PEN_LP        0
PEI_LP        0m
PEN_LP_Pr     0
PEI_LP_Pr     0m
  
```

```

BypassT_LP   0s
OverT_LP      0s
BypassT_LPP   0s
OverT_LPP     0s
Comp_Tinc     0s
Comp_Tdec     0s
Defrost T     0m
  
```

```

Defrost I     0h
Defrost Te    0.0°C
Max_Power     No
Comp_Ton      0s
Comp_Toff     0s

Application    0
  
```



Back to menu/Previous page



Next item/decrease value



Previous item/increase value



Next page

OK

Confirm

## 8. Limit – limitation parameters

Name	Min	Max	Default	Description
PID LP Bp	0	1000,0	40,0 °C	Proportional band for PID loop evaporating limitation.
PID LP Ti	0	10000	1200 s	Integral time for PID loop evaporating limitation.
PID HP Bp	0	1000,0	20,0 °C	Proportional band for PID loop condensing limitation.
PID HP Ti	0	10000	1000 s	Integral time for PID loop condensing limitation.
Curb_LP	No	Yes	Yes	Enable limitation from evap. and conden. temp.
WarningT	0	600	30 s	Minimal ON time of the relay contact, if limitation reach „Warning value“.
WarningVal	0	100	10 %	Value when the limitation relay signal a limitation.

```

PID_LP_Bp      0.0°C
PID_LP_Ti      0s
PID_HP_Bp      0.0°C
PID_HP_Ti      0s
Curb_LP        No
WarningT        0s
WarningVal      0%
  
```



Back to menu/Previous page



Next item/decreasing value



Previous item/increasing value

OK


Confirm


## 8. Probes – Parameters for analog inputs


Name	Min	Max	Default	Description
LP Pr. 4mA	-99,9	99,9	-1,0 Barg	Low value of suction pressure probe.
LP Pr. 20mA	-99,9	99,9	9,0 Barg	High value of suction pressure probe.
LP Pr. 4mA	-99,9	99,9	0,0 Barg	Low value of discharge pressure probe.
LP Pr. 20mA	-99,9	99,9	30 Barg	High value of discharge pressure probe.
Calib. LP	-100,0	100,0	0,0 Bar	Calibration of suction pressure probe.
Calib. HP	-100,0	100,0	0,0 Bar	Calibration of discharge pressure probe.
Calib. CS	-100,0	100,0	0,0 V	Calibration of control signal 0-10V.

```

LP Pr. 4mA  0.0Bar
LP Pr. 20mA 0.0Bar
HP Pr. 4mA  0.0Bar
HP Pr. 20m  0.0Bar
Calib. LP   0.0Bar
Calib. HP   0.0Bar
Calib. CS   0.0V
  
```


Back to menu/Previous page




Next item/decreasing value


Previous item/increasing value

OK
Confirm


## 8. Sets – operating parameters

Name	Min	Max	Default	Description
Limit Te	-20,0	15,0	4,1 °C	Setpoint for evaporate temperature limitation
Limit Tc	30,0	90,0	63,0 °C	Setpoint for condensing temperature limitation
Password	0	999	1	Password for enter the parameters.

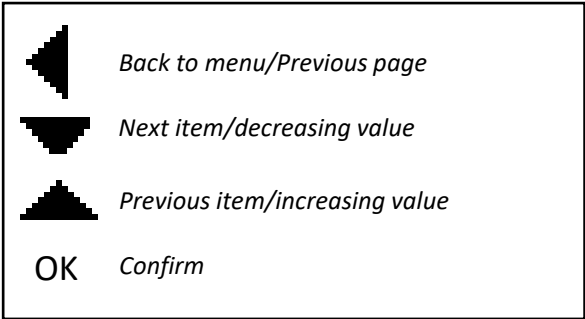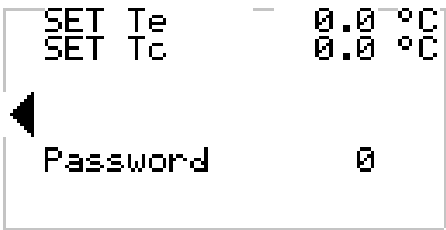

## 9. Alarms

*Pages with failures. If some failure is active, relevant text is displayed.*

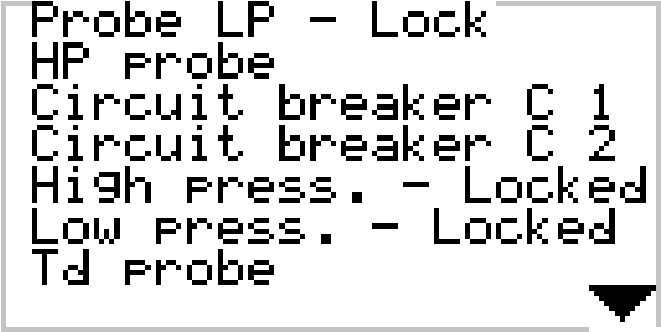

```
Probe LP - Lock
HP Probe
Circuit breaker C 1
Circuit breaker C 2
High press. - Locked
Low press. - Locked
Td Probe
```

*Probe LP – Lock : Suction probe failures exceeded.*

*HP probe : Failure of discharge pressure probe.*

*Circuit breaker C 1 : Circuit breaker failure of 1st compressor.*

*Circuit breaker C 2 : Circuit breaker failure of 2nd compressor.*

*High press. – Locked : High pressure switch failures exceeded.*

*Low press. – Locked : Low pressure switch failures exceeded.*

*Td probe : Failure of discharge temperature probe.*



*Back to menu*




*Next page*

*Description : If failure has text „Locked“, or „Lock“ the reset or power cycle is necessary.*

## 9. Alarms

*Pages with failures. If some failure is active, relevant text is displayed.*

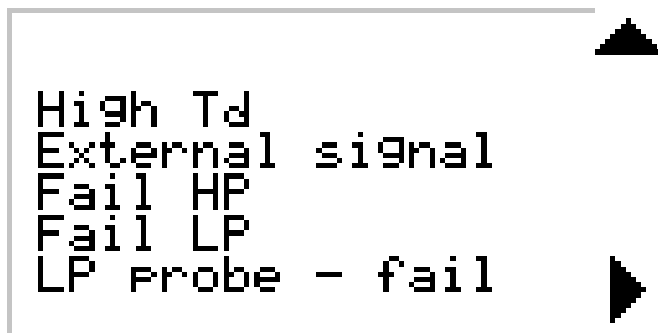

*High Td : High discharge temperature exceeded.*


*External signal : Failure of control signal. Check the right polarity and right value of signal 0-10V.*

*Fail HP : Failure of high pressure or wrong phase sequence. Automatic resettable until exceeding number of failures.*

*Fail LP : Failure of low pressure. Automatic resettable until exceeding number of failures.*

*LP probe – fail : Failure of suction pressure probe. Automatic resettable until exceeding number of failures.*


*Description : If failure has text „Locked“, or „Lock“ the reset or power cycle is necessary.*

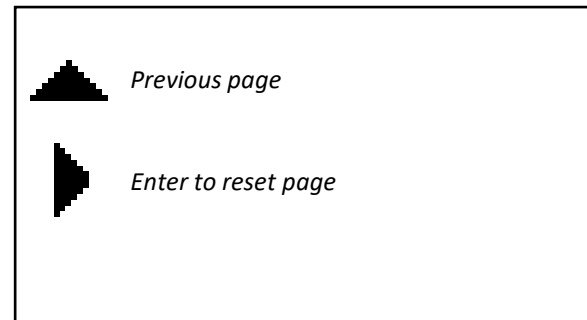

## 9. Alarms



*Here is the reset button. If is set the value „Yes“ reset procedure is done. After right reset procedure, the value is changed to „No“. For showing historic failures use button „History“.*

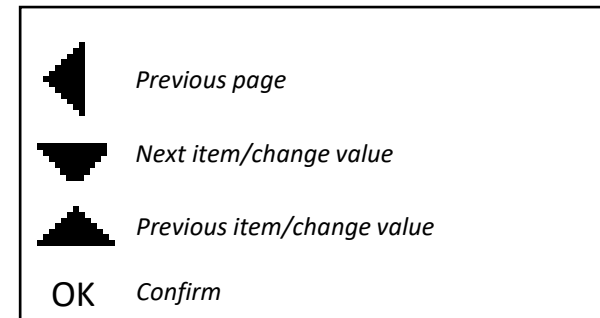


## 10. Alarms - History

*Menu for choosing last 10 failures.*



*The oldest failure is in „Hist10“.*

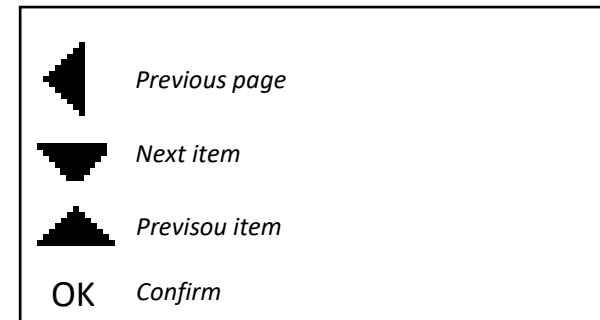



## 10. Alarms - History

*It shows failures in that time and date.*




Date	Time	
		HP probe
		Circuit breaker C 1
		Circuit breaker C 2
		High press. - Locked
		Low press. - Locked
		Td probe

Date	Time	
		High Td
		External signal
		Fail HP
		Fail LP
		LP probe - fail
		Probe LP - Lock

*If one or more failures were active, here are showed. On upper line date and time of the failure is displayed.*

*Date : rmmdd*

*Time : hhmmss*

	<i>Previous page</i>
	<i>Next item</i>
	<i>Previsou item</i>
OK	<i>Confirm</i>

## 11. Table of ModBus variables

Name	Type	Adress (dec)	Attributes	Format	Description
SET Te	Int	16879	R/W	n.n °C	Setpoint for Te limitation. (Value 100 => 10,0°C)
SET Tc	Int	16880	R/W	n.n °C	Setpoint for Tc limitation. (Value 100 => 10,0°C)
Compresor 1	Int	9442	R	%	Power 1. kompresoru.
Compressor 2	Int	9443	R	%	Power 2. kompresoru.
Te	Int	9453	R	n.n °C	Evaporating temperaute.
Tc	Int	9454	R	n.n °C	Condensing temperaute.
Alarms	Word	9466	R	n	Each bit represent failure. (bit = 1, failure is active)

### *Alarm bits description:*

*Bit 0 = Probe LP – Lock*

*Bit 1 = Probe Td*

*Bit 2 = Probe HP*

*Bit 3 = Circuit breaker C 1*

*Bit 4 = Circuit breaker C 2*

*Bit 5 = High press. – Locked*

*Bit 6 = Low press. – Locked*

*Bit 7 = External signal*

*Bit 8 = not used*

*Bit 9 = not used*

*Bit 10 = High Td*

*Bit 11 = Fail HP*

*Bit 12 = Fail LP*

*Bit 13 = LP probe – fail*

*Bit 14 = not used*

*Bit 15 = not used*



# XEV22D

## DRIVER FOR STEPPER ELECTRONIC EXPANSION VALVES

--- MANUAL FOR RELEASE 1.5 ---



1. GENERAL WARNING	1
2. GENERAL DESCRIPTION	1
3. PROBES RELATED TO THE XEV22D	1
4. CONNECTIONS	1
5. FRONT PANEL	3
6. USER INTERFACE	3
7. PARAMETER LIST	4
8. FORCED OPENING	5
9. HOW TO: USE THE HOT-KEY	5
10. DISPLAY MESSAGES	6
11. TECHNICAL DATA	6
12. STANDARD VALUES	6

### 1. GENERAL WARNING

#### 1.1 PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

#### 1.2 SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning:** disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

### 2. GENERAL DESCRIPTION

The XEV22D module is able to drive a large variety of **stepper electronic expansion valves**. XEV22D permits to regulate the superheat (SH) of the fluid that runs into refrigerating unit in order to obtain optimized performance and a functioning of the evaporator independent by climatic or load conditions. XEV22D modules are equipped with two probe inputs, one for 4 to 20mA or 0 to 5V pressure transducer and another one for NTC-EU, NTC-US or Pt1000 temperature probe.

A LAN connection permits to transmit the pressure signal to others XEV modules in order to use only one pressure transducer in multiplexed cabinet applications.

There are also two configurable digital inputs, the first one is free of voltage and the other ones is at high voltage in order to simplify connections with cooling request signal.

With the useful display it's possible to see the value of superheat (SH), the degree of opening of the valve or the probe values, the local keyboard allows programming the instrument without any other devices.

To complete instrument equipment, a RS485 serial link permits to connect XEV22D to Dixell monitoring and supervising systems.

### 3. PROBES RELATED TO THE XEV22D

#### 3.1 PP07, PP11, PP30: 4+20MA PRESSURE TRANSDUCERS

NAME	CABLE LENGTH	RANGE	DIXELL CODE
PP07	2,0MT	-0,5+7bar rel FE	BE009302 00
PP11	2,0MT	-0,5+7bar rel FE	BE009302 07
PP30	2,0MT	0+307bar rel FE	BE009302 04

#### 3.2 NP4-67 OR PMP4-67 PIPE MOUNTING TEMPERATURE PROBE



The NP4-67 (NTC sensor) or PMP4-67 (PT1000 sensor) temperature probe can be used on the suction line to monitor the evaporator/Heat exchanger outlet temperature.

**NP4-67 - Code BN609001 52** - 1.5MT NTC probe  
Measurement range: -40+110°C, Cable 1,5mt  
**PMP4-67 - Code BZ609001 53** - 1.5MT PT1000 probe  
Measurement range: -70+110°C, Cable 1,5mt

### 4. CONNECTIONS


The instrument is provided with pluggable screw terminal block to connect cables with a cross section up to 2.5 mm². Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply

cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

#### 4.1 GENERAL WARNINGS

Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections.

#### 4.2 WIRING CONNECTIONS

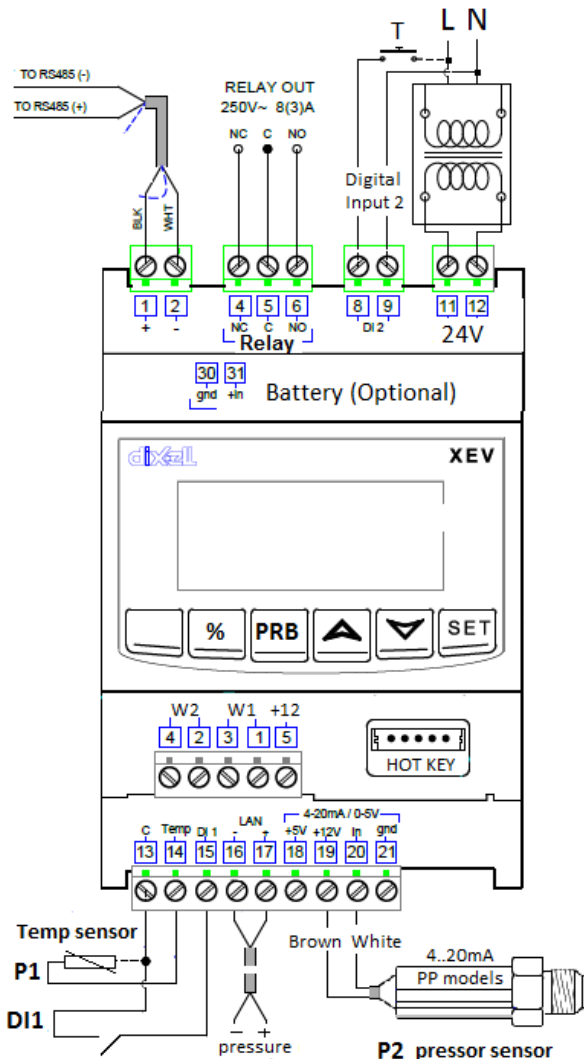


#### 4.3 WIRING GUIDELINE

DEVICE TYPE	SUGGESTED CABLE
Analog temp sensor and Digital input	AWG 22-2 SHIELDED, E.I. BELDEN #8761
Rs-485 network	AWG 22-2 SHIELDED, E.I. BELDEN #8761
Pressure transducer	AWG 22-2 SHIELDED, E.I. BELDEN #8761
Stepper valve	Use valve manufacturer's harness with a maximum length, <b>not exceed 10 meters (30 feet).</b>
Power loads and valve	Allow a maximum wire size of 14 AWG (2 mm²)

#### 4.4 TEMPERATURE PROBE MOUNTING

Advised temperature probe placement is illustrated in figure nearby. Between 0 and 180 inclination degrees respect to horizontal pipe section.

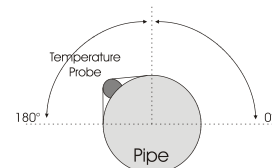

#### 4.5 PROBE CONNECTION

##### 4.5.1 General warnings

**Pressure probe (4 - 20mA or ratiometric):** respect the polarity. If using terminal ends be sure there are no bear parts which could cause short circuiting or introduce noise disturbance at high frequencies. To minimize the induced disturbances use shielded cables with the shield connected to earth.


**Temperature probe:** it is recommended to mount the temperature probe on the outlet of the evaporator heat/exchanger and to isolate it properly to detect the gas outlet temperature.

**PP07 PP11, PP30, 4÷20mA pressure transducers:**

Set parameter **tPP** = 420.

**Connect:**


Brown wire (+) to terminal 19;  
White wire (-) to terminal 20

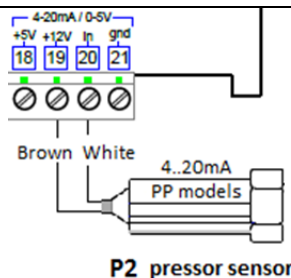**P2 pressor sensor****PPR15 PPR30 Ratiometric transducers (0.5÷4.5Vdc)**

Set parameter **tPP** = 5U

**Connect:**

Brown wire (+) to terminal 18;  
White wire (in) to terminal 20;  
Green wire (gnd) to terminal 21

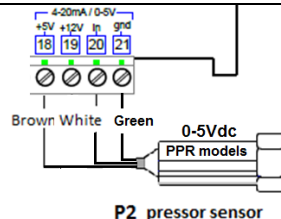**P2 pressor sensor****Temperature probe:**


Set parameter

**ttE** = NTC: (NTC 10K) or

**ttE** = Pt1: (Pt1000) or

**ttE** = nCP: (NTC-US 10K)

Connect to terminals 13-14

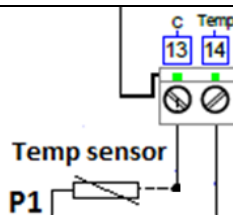**P1****4.6 CONFIGURABLE DIGITAL INPUT CONNECTION**

The superheat regulation is performed only when the **cooling digital input** is enabled.

It's possible to enable the SH regulation via:


- **Digital input 1, free voltage contact:**

Use the **terminals (14-15)**, set the parameter **i1F** = CCL, its polarity it's set by par. **i1P**.

- **Digital input 2 (8-9), main voltage contact**

Use the **terminals (8-9)**, set the parameter **i2F** = CCL, its polarity it's set by par. **i1P**

Usually the digital input is connected to a thermostat or an activation contact

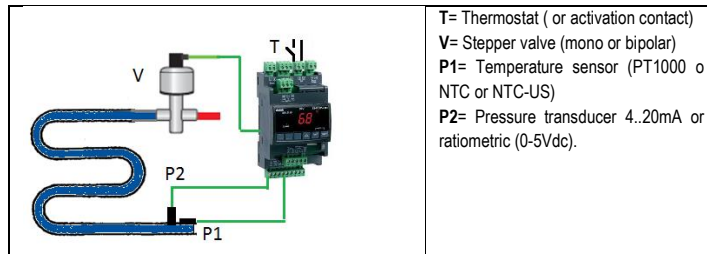

T= Thermostat ( or activation contact)  
V= Stepper valve (mono or bipolar)  
P1= Temperature sensor (PT1000 o NTC or NTC-US)  
P2= Pressure transducer 4..20mA or ratiometric (0-5Vdc).

**4.7 SUPPLY CONNECTION**

Power supply: XEV22D is powered at 24Vac/dc.

Use Class 2 transformer at list 20VA as the TF20D

Connect transformer to terminals 11-12.

**4.8 VALVE CONFIGURATION****4.8.1 BEFORE CONNETTING THE VALVE**

- ALWAYS CONNECT OR DISCONNET THE VALVE WHEN THE CONTROLLER IS NOT POWERED
- CONFIGURE THE VALVE ON THE XEV22D BEFORE CONNECTING THE VALVE

1. BEFORE CONNECTING the valve, to avoid possible problems, configure the driver by making the right changes on the parameters.
2. The max distance between an XM controller and a valve **must not exceed 10 m**. To avoid any problems, use only **shielded cables** with section greater than or equal to 0.325 mm<sup>2</sup> (AWG22).
3. Select the kind of motor (**tEu parameter**) and check if the valve is present in **tEP parameter table** reported here below.

tEP	LSt (steps*10)	uSt (steps*10)	CPP (mA*10)	CHd (mA*10)	Sr (step/s)	tEu (bip/unip)	HSF (Half/full)
1 Danfoss ETS-25/50	7	262	10	10	300	bP	FUL
2 Danfoss ETS-100	10	353	10	10	300	bP	FUL
3 Danfoss ETS-250/400	11	381	10	10	300	bP	FUL
4 Sporlan SEI 0.5-11	0	159	12	0	200	bP	FUL

5	Sporlan SER 1.5-20	0	159	12	0	200	bP	FUL
6	Sporlan SEI 30	0	319	16	0	200	bP	FUL
7	Sporlan SER(I) G,J,K	0	250	12	0	200	bP	FUL
8	Sporlan SEI 50	0	638	12	0	200	bP	FUL
9	Sporlan SEH(I) 100	0	638	12	0	200	bP	FUL
10	Sporlan SEH(I) 175	0	638	12	0	200	bP	FUL
11	Emerson EX4-EX5-EX6	5	75	50	10	500	bP	FUL
12	Emerson EX7	10	160	75	25	500	bP	FUL
13	Emerson EX8 500	10	260	80	50	500	bP	FUL
14	Emerson EX3	4	33	0	0	50	uP	HAF

**Liability Limitation**

All the pre-sets have been done according to the documentation available when the XEV22D has been released, see below reference:

**Danfoss:**

- DKRCC.PD.VD1.C6.02 / 520H8021 @ Danfoss A/S (AC-MC1 / sw), 2014-07

**Sporlan:**

- 92008 / Bulletin 100-20

- RACE Catalogue 100-20-3 EDEV-2/UK - 02/2013

**Emerson**

- FC-TD/ EX4-8 July 2008


In any case for each valve the only reference is given by the manual released by the manufacture together with the valve.

Dixell can't be considered responsible for any change made by the manufacturer and reported on the manufacturer manual.

**4.8.2 Manual setting of valve**

To set the valve manually, act the according to the following procedure:

- a. Set **tEP=0**
- b. Then set following parameters: **LSt**, **uSt**, **Sr**, **CPP**, **CHd** according to the valve manual


**4.9 VALVE CONNECTION****4.9.1 TERMINALS FOR VALVE CONNECTION****4 WIRES VALVES (BIPOLAR)**

Connection numbering	ALCO EX	SPORLAN SEI-SEH	DANFOSS ETS
4	BLUE	WHITE	BLACK
2	BROWN	BLACK	WHITE
3	BLACK	RED	RED
1	WHITE	GREEN	GREEN

**5-6 WIRES VALVES (UNIPOLAR)**

Connection numbering	EMERSON EX3	SPORLAN	SAGINOMIYA
4	WHITE	ORANGE	ORANGE
2	BROWN	RED	RED
3	BLACK	YELLOW	YELLOW
1	BLUE	BLACK	BLACK
5 - Common	GRAY	GRAY	GRAY

AFTER MAKING THE CONNECTION, PLEASE SWITCH OFF AND ON THE XEV CONTROLLER IN ORDER TO BE SURE OF THE RIGHT POSITIONING OF THE VALVE.

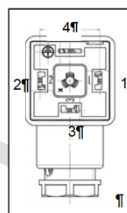
**4.10 EX3 SOLENOID VALVE CONNECTION****4.10.1 SOLENOID VALVE CONNECTION**

The positive shut-off function eliminates the necessity of having a separate solenoid valve or any external energy storage device such as battery or super-cap boards.

**Pin connections.**

- Pin 1. Line - Power supply
- Pin 2. Neutral
- Pin 3. Not Used
- Pin 4. Ground


#### 4.10.2 230Vac or 115 Vac coil: Direct connection to the main power supply

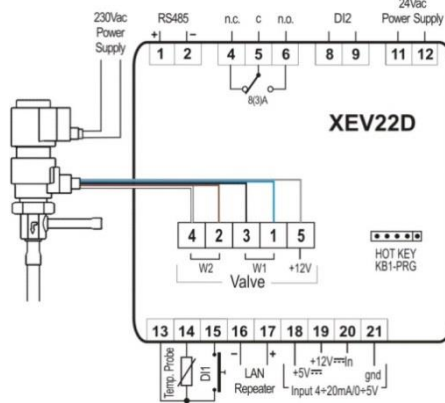

NOTE: EX3 models with 115Vac coil requires 115Vac supply.

#### 4.10.3 24Vac coil: transformer connection.

With coil of the EX3 at 24Vac, a 40VA transformer must be used, like TF40D. Any transformer with lower capacity can damage the valve or the controller

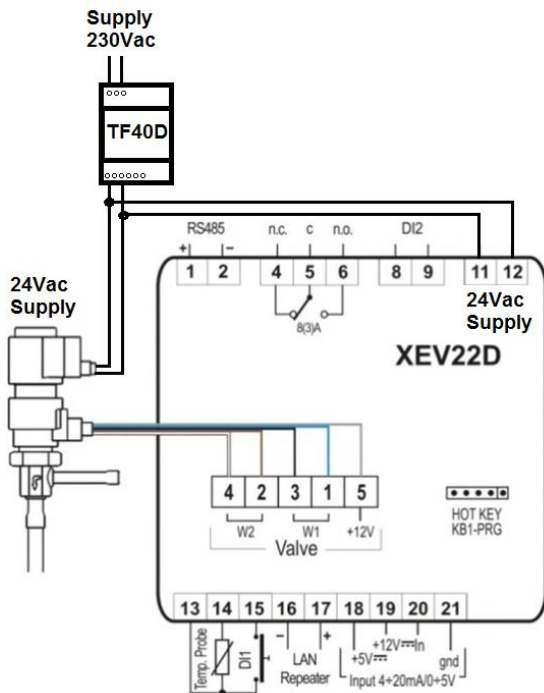

#### 4.11 ABSOLUTE MAXIMUM POWER

XEV22D is able to drive a wide range of stepper valves, in the following table are indicated the maximum values of current that the actuator can supply to the stepper wiring. The Dixell transformer to use is the TF20D.

use is the TF20D.

NOTE: for the EX3 with 24Vac coil, if a unique transformer is used, the minimum required capacity is 40VA. The TF40D can be used.

NOTE: the electrical power absorption of the valve can be unrelated to refrigeration power that valve has. Before using the actuator, please read the technical manual of the valve supplied by the manufacturer and check the maximum current used to drive the valve in order to verify that they are lower than those indicated below.

VALVE TYPE	BIPOLAR VALVES (4 wires)	Maximum Current 0.9A
	UNIPOLAR VALVES (5-6 wires)	Maximum Current 0.33A

#### 4.12 RS485 SERIAL LINE

All models can be connected to the monitoring and supervising system XWEB3000. If Mod=Std standard ModBUS-RTU protocol is used, if Mod=AdU custom XWEB library is required. This last configuration makes possible to use the same serial address of the thermostat that gives the cooling request to XEV. In this way, it's possible to reduce the number of addresses used.

#### 4.13 CONNECTION OF XEC SUPERCAP (BACK UP BATTERY)

XEC Supercap is designed to be used with Dixell products (XM678D, XEV, IEV and others); to close the stepper valve in case of power failure.


!!!!!! IMPORTANT !!!!!

XEC Supercap and XEV22D must be powered by two different transformers; the failure of the observance of this rule may result in damage to the XEC Supercap and / or the connected XEV22D.

#### Wiring connection

XEV22D	XEC
Terminal 31 (+)	Terminal 4 (12Vdc)
Terminal 30 (gnd)	Terminal 3 (gnd)

#### 5. FRONT PANEL

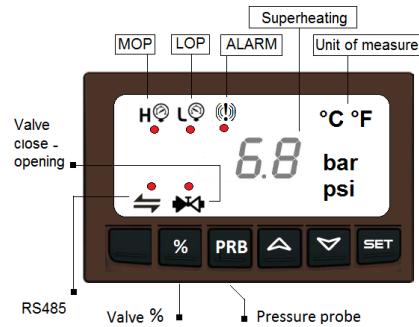

<b>SET</b>	To display and to modify the set point. In programming mode it selects a parameter or it confirms a value.
<b>%</b>	Push to display the valve opening value 0..100% for few seconds.
<b>PRB</b>	Push to display the pressure value for few seconds.
<b>▲</b>	By pressing and releasing this key, it's possible to see the values of the probes. In programming mode it slides the codes of the parameters or it increases their values.
<b>▼</b>	In programming mode it slides the codes of parameters or it decreases their values.

#### KEYS COMBINATIONS

<b>▼</b> + <b>▲</b>	To lock or to unlock the keyboard
<b>SET</b> + <b>▼</b>	To enter programming mode.

#### 5.1 XEV22D LEDS

On display there are some luminous dots. Their meaning is described in the following table:

LED	MODE	Function
<b>L</b>	ON	Low pressure alarm
<b>H</b>	ON	Maximum Operating Pressure alarm
<b>⬮</b>	OFF	Valve is completely closed
<b>⬮</b>	BLINKING	Valve is moving
<b>⬮</b>	ON	Valve is completely opened
<b>⬮</b>	BLINKING	Serial communication present
<b>⬮</b>	OFF	Serial communication absent
<b>⬮</b>	ON	Superheat alarm

#### 6. USER INTERFACE

##### 6.1 FAST ACCESS MENU (DURING REGULATION)

- Press and release **UP** button.
- The variable available in the Fast access menu are:
  - CLP** Cooling demand percentage
  - tP1** Temperature from Probe 1
  - PPr** Pressure value from Probe 2 transducer.
  - tP2** Suction temperature obtained from pressure temperature table .
  - SH** Value of superheat;
  - StH** Superheat set point
  - oPP** Percentage of valve opening.
  - d1S** Free voltage digital input status
  - d2S** Main Voltage digital input status VAC
- Brows parameter labels with **UP** or **DOWN** buttons.
- Press **SET** to see read-only value. To change parameter, press **SET**.
- To leave the fast access menu, press and release **SET+UP** or wait for time-out to expire (about 3 minutes).

NOTE: IF THE REGULATION IS NOT ENABLED THE CONTROLLER DISPLAYS "PMP".

##### 6.2 HOW TO: SEE THE SET POINT

- Press the **SET** buttons until the set point will be showed.
- To come back to see temperature, wait about 5s or press newly **SET** key.

##### 6.3 HOW TO: MODIFY THE SET POINT

To change the set point value operate as follows:

- Press the **SET** button until the set point will be showed.
- Use **UP** or **DOWN** buttons to change its value.
- Press **SET** button to store the new value.



## 6.4 HOW TO: ENTERING "PR1" PARAMETER MENU



To enter in "Pr1" level menu:

- 1) Pressing **SET+ DOWN** buttons for about 3 seconds.
- 2) Instruments shows first parameter in Pr1 menu

## 6.5 HOW TO: ENTERING "PR2" PARAMETER MENU

To enter to "Pr2" parameters list:

1. Enter to "Pr1".
2. Select "Pr2" parameter and press **SET**.
3. The "PAS" label will be shown, then "0--" with 0 blinking.
4. Insert "321" password through **UP** and **DOWN** buttons, then press **SET** to confirm.

## 6.6 HOW TO: CHANGE A PARAMETERS VALUE



To change the parameter's value operate as follows:

1. Enter the Programming mode by pressing the **SET** and **DOWN** button for about 3s.
2. Select the required parameter.

3. Press the **SET** button to display the value.
4. Use **UP** or **DOWN** to change the value.
5. Press **SET** to store the new value and move to the following parameter.

To exit: Press **SET + UP** or wait 30s without pressing any button.

**NOTE:** the set value is stored even when the procedure is exited by waiting the time-out to expire.

## 7. PARAMETER LIST

**NOTE:** All pressure parameters are relatives or absolutes depending on the PrM parameter.

## REGULATION

FIY	Kind of gas: type of gas used by plant. This is a fundamental parameter for correct functioning of all system. The table below contains the refrigerant gases managed by the XEV22D and their operating temperature. The dew point pressure has been implemented																																														
	<table border="1"> <thead> <tr> <th>LABEL</th><th>REFRIGERANT</th><th>OPERATING RANGE</th></tr> </thead> <tbody> <tr><td>R22</td><td>r22</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>134</td><td>r134A</td><td>-70-60°C/-94+120°F</td></tr> <tr><td>404</td><td>r404A</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>47A</td><td>r407A</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>410</td><td>r410</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>507</td><td>r507</td><td>-70-60°C/-94+120°F</td></tr> <tr><td>47C</td><td>r407C</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>47F</td><td>r407F</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>290</td><td>r290 - Propane</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>CO2</td><td>r744 - Co2</td><td>-50-60°C/-58+120°F</td></tr> <tr><td>450</td><td>r450A</td><td>-45-60°C/-69+120°F</td></tr> <tr><td>513</td><td>r513</td><td>-45-60°C/-69+120°F</td></tr> <tr><td>448</td><td>r448A</td><td>-45-60°C/-69+120°F</td></tr> <tr><td>449</td><td>r449A</td><td>-45-60°C/-69+120°F</td></tr> </tbody> </table>	LABEL	REFRIGERANT	OPERATING RANGE	R22	r22	-50-60°C/-58+120°F	134	r134A	-70-60°C/-94+120°F	404	r404A	-50-60°C/-58+120°F	47A	r407A	-50-60°C/-58+120°F	410	r410	-50-60°C/-58+120°F	507	r507	-70-60°C/-94+120°F	47C	r407C	-50-60°C/-58+120°F	47F	r407F	-50-60°C/-58+120°F	290	r290 - Propane	-50-60°C/-58+120°F	CO2	r744 - Co2	-50-60°C/-58+120°F	450	r450A	-45-60°C/-69+120°F	513	r513	-45-60°C/-69+120°F	448	r448A	-45-60°C/-69+120°F	449	r449A	-45-60°C/-69+120°F	
LABEL	REFRIGERANT	OPERATING RANGE																																													
R22	r22	-50-60°C/-58+120°F																																													
134	r134A	-70-60°C/-94+120°F																																													
404	r404A	-50-60°C/-58+120°F																																													
47A	r407A	-50-60°C/-58+120°F																																													
410	r410	-50-60°C/-58+120°F																																													
507	r507	-70-60°C/-94+120°F																																													
47C	r407C	-50-60°C/-58+120°F																																													
47F	r407F	-50-60°C/-58+120°F																																													
290	r290 - Propane	-50-60°C/-58+120°F																																													
CO2	r744 - Co2	-50-60°C/-58+120°F																																													
450	r450A	-45-60°C/-69+120°F																																													
513	r513	-45-60°C/-69+120°F																																													
448	r448A	-45-60°C/-69+120°F																																													
449	r449A	-45-60°C/-69+120°F																																													
rEt	<b>Reaction time</b> (1+100s; 0 = automatic time adjustment) time delay between valve position adjustments. It's the time between the valve adjustment command and when the valve is moved. EI With <b>rEt = 1</b> the valve is moved continuously, with <b>rEt = 10</b> the valve is moved every 10s, with <b>rEt = 0</b> the reaction time is calculated automatically by the system, according the SH variation. The range is between 6+60s.																																														
PEo	<b>Probe Error opening percentage:</b> (0 to 100%) if a temporary probe error occurs, valve opening percentage is <b>PEo</b> until <b>PEd</b> time is elapsed. If <b>PEo</b> is different from 0 it assures cooling also with probe error, because even if the device cannot calculate superheat the valve can work at <b>PEo</b> percentage.																																														
PEd	<b>Probe Error delay before stopping regulation:</b> (0 to 239sec; 240=On=unlimited) if probe error duration is higher than <b>PEd</b> , valve will close completely and "PF" message will be showed. With <b>PEd=on</b> , valve opening is <b>PEo</b> until probe error finishes.																																														
tEU	<b>Type of Stepper motor:</b> (UP; bP) it permits to select the kind of valve. <b>UP</b> = Unipolar valves; <b>bP</b> = Bipolar valves. !!!!!! <b>WARNING</b> !!!!! <b>This parameter has to be adjusted before connecting the valve.</b>																																														

## tEP Predefined valve selection: (0 to 14)

	MODEL	LSt (steps*10)	uSt (steps*10)	CPP (mA*10)	CHd (mA*10)	Sr (step/s)	tEu (bip/unip)	HSF (Half/full)
1	Danfoss ETS-25/50	7	262	10	10	300	bP	FUL
2	Danfoss ETS-100	10	353	10	10	300	bP	FUL
3	Danfoss ETS-250/400	11	381	10	10	300	bP	FUL
4	Sporlan SEI 0.5-11	0	159	12	0	200	bP	FUL
5	Sporlan SER 1.5-20	0	159	12	0	200	bP	FUL
6	Sporlan SEI 30	0	319	16	0	200	bP	FUL
7	Sporlan SER(I) G,J,K	0	250	12	0	200	bP	FUL
8	Sporlan SEI 50	0	638	12	0	200	bP	FUL
9	Sporlan SEH(I) 100	0	638	12	0	200	bP	FUL
10	Sporlan SEH(I) 175	0	638	12	0	200	bP	FUL
11	Emerson EX4-EX5-EX6	5	75	50	10	500	bP	FUL
12	Emerson EX7	10	160	75	25	500	bP	FUL
13	Emerson EX8 500	10	260	80	50	500	bP	FUL
14	Emerson EX3	4	33	0	0	50	uP	HAF

## Liability Limitation

All the pre-sets have been done according to the documentation available when the XEV22D has been released, see below reference:

## Danfoss:

- DKRCC.PD.VD1.C6.02 / 520H8021 @ Danfoss A/S (AC-MCI / sw), 2014-07

## Sporlan:

- 92008 / Bulletin 100-20
- RACE Catalogue 100-20-3 EDEV-2/UK - 02/2013

## Emerson

- FC-TD/ EX4-8 July 2008

In any case for each valve the only reference is given by the manual released by the manufacture together with the valve.

Dixell can't be considered responsible for any change made by the manufacturer and reported on the manufacturer manual.

## Manual valve setting

To set the valve manually, act the according to the following procedure:

- a. Set **tEP=0**
- b. Then set following parameters: **LSt**, **USt**, **Sr**, **CPP**, **CHd**, **tEu**, **HFS** according to the valve manual

HFS	<b>Kind of motor movement:</b> (HAF; FUL) • <b>HAF</b> = half step. Use this setting for the unipolar valve. • <b>FUL</b> = full step. Use this setting for the bipolar valve.
LSt	<b>Minimum number of steps:</b> (0 to USt (*10)) it permits to select the minimum number of steps. At this number of steps the valve should be closed. So it's necessary the reading of manufacturer datasheet to set correctly this parameter. It's the minimum number of steps to stay in advised range of functioning. !!!!!! <b>WARNING</b> !!!!! <b>after changing this parameter the valve will have to be reinitialized. The device performs this procedure automatically and restarts its normal functioning when the programming mode ends.</b>
USt	<b>Maximum number of steps:</b> (LSt to 800 (*10)) it permits to select the maximum number of steps. At this number of steps the valve should be completely opened. Read the datasheet provided by manufacturer of the valve to set correctly this parameter. It's the maximum number of steps to stay in advised range of functioning. !!!!! <b>WARNING</b> !!!!! <b>after changing this parameter the valve will have to be reinitialized. The device performs this procedure automatically and restarts its normal functioning when the programming mode ends.</b>
Est	<b>Extra step in closing phase:</b> (0 to 255 (*10)) it sets the number of extra steps the controller performs, when the valve is closed at start up, to force the closure of the valve.
Sr	<b>Step rate:</b> (10 to 600 step/sec) it is the maximum speed to change step without losing precision (=losing steps). It's advised to stay under the maximum speed.
CPP	<b>Current per phase (only bipolar valves):</b> (0 to 100 (*10mA)) it is the maximum current per phase used to drive valve. It's used <b>only with bipolar valves</b> .
CHd	<b>Holding current per phase (only bipolar valves):</b> (0 to 100 (*10mA)) it is the current per phase when the valve is stopped for more than 4 minutes. It's used <b>only with bipolar valves</b> .
oPE	<b>Start opening Percentage:</b> (0 to 100%) opening valve percentage when start function is active and during post defrost phase. This phase duration is <b>SFd</b> time.
SFd	<b>Start Function duration:</b> (0.0 to 42min 00s, res. 10s) it sets start function duration and post-defrost duration. <b>During this phase the alarms are not enabled.</b>

<b>dtY</b>	<b>Pilot duty:</b> (2-10dec/sec) To reach the final position the valve moves for Ton sec and stops for Tof sec, where Ton and Tof are defined as in the following: Ton= dtY/10s Tof= (1-dtY)/10s <b>Note:</b> with dtY=10 the Pilot duty function is disabled. With bipolar valve, during the Toff time the maintenance current is used. It can be used to drive properly some type of valves, where the manufacturer suggests to move the valve with duty cycle. The duty cycle in any case slows the valve adjustment and has an effect on the regulation, making it smoother.
<b>MnF</b>	<b>Maximum opening percentage at normal Functioning:</b> (0 to 100%) during regulation it sets the maximum valve opening percentage.
<b>FoP</b>	<b>Forced Opening percentage:</b> (0 to 100; nU) if FoP=nU valve works with regulation algorithm. If FoP is different from nU the valve stays at FoP opening percentage. This function could be useful during plant starting or during service operations.

## PI PARAMETERS (trained staff)

<b>AMS</b>	<b>Self self adaptive SH regulation enabling:</b> parameter enables the self adaptive regulation of the superheat <b>no</b> = standard regulation using the PID parameters (Pb, rS, inC, dFC) <b>yES</b> = self-adaptive regulation, controller regulates SH automatically, setting the PID parameter
<b>Atu</b>	<b>Minimum STABLE superheat search (No; yES)</b> This parameter enables the search of the minimum stable superheat. The lowest admitted value is LSH+2°C
<b>Pb</b>	<b>Proportional band:</b> (0.1 to 50.0°C; 1 to 90°F) PI proportional band. A value bigger than 5°C is advised.
<b>rS</b>	<b>Band Offset:</b> (-12.0 to 12.0°C; -21 to 21°F) PI band offset. It permits to move the proportional band of the PI. With rS=0 the band is between [SET to SET+Pb].
<b>inC</b>	<b>Integration time:</b> (0 to 255s) PI integration time.
<b>dFC</b>	<b>Derivative time</b> (0 to 255s) PID derivative time.

## PROBE PARAMETERS

<b>tPP</b>	<b>Type of Pressure transducer:</b> (420; 5V; LAN) it sets type of pressure transducer to use. 420 = 4 to 20mA pressure transducer; 5V = 0 to 5V ratiometric transducer; LAN = the pressure signal comes from another XEV module.
<b>LPP</b>	<b>Enable pressure probe sending in LAN:</b> (n; Y) if LPP=Y the value of pressure read by device is sent in LAN. Only one device of the LAN can have LPP=Y.
<b>PA4</b>	<b>Probe value at 4mA or at 0V:</b> (-1.0 to P20 bar; -14 to P20 psi) pressure value measured by probe at 4mA or at 0V (related to PrM parameter).
<b>P20</b>	<b>Probe value at 20mA or at 5V:</b> (PA4 to 50.0 bar; PA4 to 725 psi) pressure value measured by probe at 20mA or at 5V (related to PrM parameter).
<b>oPr</b>	<b>Pressure probe calibration:</b> -12.0 to 12.0 bar; -174 to 174 psi.
<b>ttE</b>	<b>Type of temperature probe for SH calculation ( 13-14) (PtM; nTC)</b> it allows to set the kind of probe used by the instrument: PtM = PT1000 probe, nTC = NTC 10K probe. CtC = NTC-US.
<b>otE</b>	<b>Temperature probe calibration:</b> -12.0 to 12.0°C; -21 to 21°F.

## DIGITAL INPUTS

<b>i1P</b>	<b>Digital Input 1 (Free of voltage) digital input polarity:</b> (cL, oP) CL = activated when closed; oP = activated when opened.
<b>i1F</b>	<b>Digital Input 1 (Free of voltage) digital input function:</b> (CCL, rL) CCL = cooling call; rL = digital input activates relay.
<b>d1d</b>	<b>Digital Input 1 (Free of voltage) activation delay:</b> (0 to 255 min) this activation delay is used only if digital input is configured as rL.
<b>i2P</b>	<b>Digital Input 2 (High voltage) digital input polarity:</b> (CL, oP) CL = activated when closed; oP = activated when opened.
<b>i2F</b>	<b>Digital Input 2 (High voltage) digital input function:</b> (CCL, rL) CCL = cooling call; rL = digital input activates relay.
<b>d2d</b>	<b>Digital Input 2 (High voltage) activation delay:</b> (0 to 255 min) this activation delay is used only if digital input is configured as rL.

## ALARM

<b>dAo</b>	<b>Alarm delay after restarting regulation:</b> (0.0 to 42min 00s, res. 10s) time between digital input activation (configured as CCL) and alarm signalling. The LSH alarm is always signalled also during this time.
<b>tdA</b>	<b>Type of alarm signalled by relay:</b> (ALL, SH, PrE, di) ALL = all alarm; SH = superheat alarm; PrE = pressure alarm; di = activation only when digital input configured as rL is active.
<b>LPL</b>	<b>Lower Pressure Limit for superheat regulation:</b> (PA4 to P20 bar; PA4 to P20 psi) when suction pressure comes down to LPL, the regulation is performed with a LPL fixed value for pressure. When suction pressure comes back to LPL, the normal pressure value is used (related to PrM parameter).

<b>MoP</b>	<b>Maximum Operating Pressure threshold:</b> (LoP to P20bar; LoP to P20 psi) if suction pressure exceeds maximum operating pressure value, the instrument signals this situation with an alarm LED H (related to PrM parameter).
<b>LoP</b>	<b>Lowest Operating Pressure:</b> (PA4 to MoP bar; PA4 to MoP psi) if the suction pressure comes down to this value, a low pressure alarm will be signalled with an alarm LED L (related to PrM parameter).
<b>PHY</b>	<b>Pressure alarm Hysteresis:</b> (0.1 to 5.0 bar, 1 to 72 psi) pressure hysteresis to disable alarm signalling.
<b>dML</b>	<b>Delta MoP-LoP:</b> (0 to 100%) when a MoP alarm occurs valve will close of the dML percentage every one second until MoP alarm is active. When LoP occurs, valve will open of the dML percentage every one second until LoP alarm is active.
<b>MSH</b>	<b>Maximum SuperHeat alarm:</b> (LSH to 80.0°C; LSH to 144°F) when superheat exceeds this value, an high superheat alarm will be signalled after interval SHd. When the Maximum superheat alarm recovers, the valve waits SHd before restarting the regulation
<b>LSH</b>	<b>Lowest SuperHeat alarm:</b> (0.0 to MSH°C; 0 to MSH°F) when superheat goes down to this value a low superheat alarm is signalled after interval SHd. When the Low superheat alarm recovers, the valve waits SHd before restarting the regulation
<b>SHY</b>	<b>SuperHeat alarm Hysteresis:</b> (0.0 to 25.5°C; 1 to 77°F) hysteresis for superheat alarm deactivation.
<b>SHd</b>	<b>SuperHeat alarm signalling delay/ Restart regulation delay after MAX or Low superheat alarm :</b> (0 to 255 s) when a superheat alarm occurs, the delay time SHd have to expire before signalling this alarm. After the superheat alarm the regulation restart after SHd time
<b>FrC</b>	<b>Fast-recovery Constant: (1 to 100 s; 0 = disabled) – Present only in specific part numbers.</b> It permits to increase integral action when SH goes below the set-point, to close valve faster. With FrC=0 fast recovery function is disabled.
<b>tdS</b>	<b>Pressure filter (0-240s).</b> The pressure value used for the SH calculation is the average value of the pressure in the tdS time. Suggested values: tdS: 5-10 for heat exchanger or condensing unit tdS: 1-6 for supermarkets. E.I. With tdS = 5 the controller calculates the average pressure value in 5s and will use it to calculate the SH.
<b>tdt</b>	<b>Temperature filter (0-240s).</b> The value used for the SH calculation is the average value of the temperature in the tdt time. A value between 1-3 his suggested E.I. With tdt = 3 the controller calculates the average temperature value in 3s and will use it to calculate the SH.

## DISPLAY

<b>Lod</b>	<b>Local display:</b> (SH; PEr; P1; P2) SH = superheat; PEr = valve opening percentage; P1 = value of temperature measured; P2 = pressure measured by P2 probe.
<b>CF</b>	<b>Temperature measurement units:</b> (°C; °F) °C = Celsius degree; °F = Fahrenheit degree. NOTE: by changing measurement unit, the regulation parameters have to be correctly changed.
<b>PMU</b>	<b>Pressure Measurement units:</b> (bAr, PSi) bAr = bar; PSi = psi. NOTE: by changing measurement unit, the regulation parameters have to be correctly changed.
<b>rES</b>	<b>Resolution (only °C):</b> (dE; in) dE = decimal format; in = integer format.
<b>PrM</b>	<b>Pressure visualization Mode:</b> (rEL; AbS) rEL = relative pressure; AbS = absolute pressure. All pressure parameters depend on this parameter.
<b>CLP</b>	<b>Cooling Percentage (read only):</b> Display the cooling percentage.
<b>tP1</b>	<b>Temperature Probe value (read only):</b> it shows temperature probe value from P1.
<b>PPr</b>	<b>Pressure probe value (read only):</b> it shows pressure probe value. The value depends on PrM.
<b>tP2</b>	<b>Temperature from P2 (read only):</b> it shows temperature obtained from conversion of pressure value.
<b>SH</b>	<b>Super heat value</b>
<b>STH</b>	<b>Superheat set point value</b>
<b>oPP</b>	<b>Opening Percentage (read only):</b> it shows the actual opening percentage of the valve.
<b>d1S</b>	<b>Free of voltage digital input State (read only):</b> it shows the free of voltage digital input.
<b>d2S</b>	<b>High voltage digital input State (read only):</b> it shows the high voltage digital input state.
<b>Adr</b>	<b>RS485 Serial Address:</b> (1 to 247) Identifies the instrument address when connected to a ModBUS compatible monitoring system.
<b>Mod</b>	<b>ModBus:</b> (AdU; Std) AdU = (Only for XWEB systems) in this case XEV and thermostatic controller are considered an alone instrument (it requires a custom library for XWEB); Std = to use XEV in stand-alone mode, in this case normal Modbus-RTU protocol is used.
<b>Ptb</b>	<b>Parameters map: (read only)</b> it identifies parameters map written by factory.
<b>rEL</b>	<b>Release Firmware: (read only)</b> it shows firmware release.
<b>Pr2</b>	<b>Second level menu.</b>

## 8. FORCED OPENING

If necessary, by changing FoP parameter it's possible to force the valve opening. For example, by setting FoP=50 the valve will be open at half of full scale. To disable this function it's necessary to set FoP=nU (default value). The valve opening is enabled only when CCL digital input is enabled.

## 9. HOW TO: USE THE HOT-KEY

## 9.1 PROGRAM A HOT-KEY FROM THE INSTRUMENT (UPLOAD)

- 1) Program one controller with the front keypad.
- 2) When the controller is ON, insert the HOT-KEY and push UP button; the "uPL" message appears followed a by flashing "End".
- 3) Push SET button and the "End" will stop flashing.
- 4) Turn OFF the instrument, remove the HOT-KEY and then turn it ON again.

**NOTE:** the "Err" message is displayed in case of any failed programming operation. In this case, push again UP button if you want to restart the upload again or remove the HOT-KEY to abort the operation.



**9.2 PROGRAM AN INSTRUMENT USING A HOT KEY (DOWNLOAD)**

- 1) Turn OFF the instrument.
- 2) Insert a pre-programmed **HOT-KEY** into the 5-PIN connector and then turn the Controller ON.
- 3) Automatically the parameter list present into the **HOT-KEY** will be downloaded into the Controller memory. The "doL" message will blink during this operation, followed by a flashing "End" label.
- 4) After 10 seconds the instrument will restart working with the new parameters.
- 5) Remove the **HOT-KEY**.

**NOTE:** the "Err" message is displayed in case of any failed programming operation. In this case, push again **UP** button if you want to restart the upload again or remove the **HOT-KEY** to abort the operation.

**10. DISPLAY MESSAGES**

Mess.	Cause	Outputs
"PMP"	None of digital inputs configured as <b>CCL</b> are activated	Valve closed
"PF"	The Ped time is elapsed and the regulation is stopped	Valve closed after <b>PEd</b> . There is a probe error
"P1"	Temperature probe fault	According to <b>PEo</b> and <b>PEd</b> .
"P2"	Pressure transducer fault	According to <b>PEo</b> and <b>PEd</b> .
"HSH"	High superheat alarm	By PI
"LSH"	Low superheat alarm	Valve Closed
"LPL"	Low pressure limit	see <b>LPL</b> parameter
"MoP"	Maximum Operating Pressure	see <b>dML</b> parameter
"LoP"	Lowest Operating Pressure	see <b>dML</b> parameter
"StF"	Start Function enabled	see <b>oPE</b> , <b>SfD</b> parameter
"EE"	Memory error	-

**10.1 ALARM RECOVERY**

Probe alarms "P1", "P2" start few seconds after the fault in the probe; they automatically stop few seconds after the probe restarts normal operation. Check connections before replacing the probe. Max. And min. Alarms "HSH", "LSH", "MoP" and "LoP" automatically stop as soon as the variable returns to normal values.

The instrument is provided with an internal check verifying memory integrity. Alarm "EE" will flash when a failure in the internal memory is detected. In such case call the service.

**11. TECHNICAL DATA**

**Housing:** self extinguishing ABS.

**Case:** 4 DIN modules 70x135mm with male and female connectors; depth 60mm.

**Mounting:** DIN RAIL mounted in an omega (3) din rail.

**Protection:** IP20.

**Connections:** pluggable screw terminal block  $\leq 2.5 \text{ mm}^2$  wiring.

**Power supply:** 24Vac/dc  $\pm 10\%$ .

**Power absorption:** depending on connected valve 20VA max.

**Display:** three digits with icons, red LEDs, height 14.2 mm.

**Inputs:** 1 temperature probe:

**PT1000 probe:** -50 to 110°C (-58 to 230°F).

**NTC probe:** -40 to 110°C (-40 to 230°F).

1 pressure transducer: 4 to 20mA or 0 to 5V.

**Digital inputs:** 1 free of voltage.

1 high voltage.

**Outputs for valve:** bipolar or unipolar valves.

**Data storage:** on the non-volatile memory (EEPROM).

**Kind of action:** 1B.

**Pollution degree:** normal.

**Software Class:** A.

**Operating temperature:** 0 to 55°C (32 to 131°F).

**Storage temperature:** -25 to 60°C (-13 to 140°F).

**Relative humidity:** 20 to 85% (no condensing).

**Resolution:** 0.1°C or 1°F.

**Precision at 25°C (77°F):**  $\pm 0.7^\circ\text{C} \pm 1 \text{ digit}$ .

**12. STANDARD VALUES**

Lab el	Description	Range	Default	Level
<b>StH</b>	Superheat set point	0.0÷24°C	6	---
<b>FtY</b>	Kind of gas	R22, 134, 404, 47A, 410, 507, 47C; r407c; 47F; 290; CO2; 450; 513; 448; 449	404	Pr2
<b>rEt</b>	Reaction time	0÷100s	1	Pr2
<b>PEo</b>	Probe Error opening percentage	0 to 100 %	1	Pr2
<b>PEd</b>	Probe Error delay before stopping regulation	0 to 239 s; on	50	Pr2
<b>tEU</b>	Type of Stepper motor	uP; bP	On	Pr2
<b>tEP</b>	Automatic Valve configuration	0 to 10	bP	Pr2
<b>HFS</b>	Kind of driving	HAF; FUL	0	Pr2
<b>LSt</b>	Minimum number of steps	0; USt (*10)	FUL	Pr2
<b>USt</b>	Maximum number of steps	LSt to 800 (*10)	0	Pr2
<b>ESt</b>	Extra steps in closing phase	0 to 255 (*10)	0	Pr2
<b>Sr</b>	Step rate	10 to 600 step/s	0	Pr2
<b>CPP</b>	Current per phase (only bipolar valves)	0 to 100 (*10mA)	10	Pr2
<b>CHd</b>	Holding current per phase (only bipolar valves)	0 to 100 (*10mA)	0	Pr2
<b>oPE</b>	Start opening Percentage	0 to 100 %	80	Pr2
<b>SfD</b>	Start Function duration	0.0 to 42min 00s, res. 10s	0,3	Pr2
<b>dtY</b>	Pilot duty	2 ÷ 10 dec/sec	10	Pr2
<b>MnF</b>	Maximum opening percentage	0 to 100 %	100	Pr2
<b>FoP</b>	Forced Opening time-out	0 to 100 %; nU	nu	Pr2
<b>PI PARAMETERS (trained staff)</b>				
<b>AM S</b>	Self self adaptive SH regulation enabling	No; yES	n	Pr2

<b>Atu</b>	Minimum STABLE superheat search	no; yES	n	Pr2
<b>Pb</b>	Proportional band	[0.1 to 50.0°C] [1 to 90°F]	12	Pr2
<b>rS</b>	Band Offset	[-12.0 to 12.0°C] [-21 to 21°F]	0.0	Pr2
<b>inC</b>	Integration time	0 to 255 s	180	Pr2
<b>dFC</b>	Derivative time	0 to 255 s	2	Pr2
<b>PROBE PARAMETERS</b>				
<b>tPP</b>	Type of pressure transducer	420; 5V; LAn	420	Pr2
<b>LPP</b>	Enable pressure probe sending in LAN	n; Y	n	Pr2
<b>PA4</b>	Probe value at 4mA or at 0V (related to PrM parameter)	[-1.0 to P20 bar] [-14 to P20 psi]	-0.5	Pr2
<b>P20</b>	Probe value at 20mA or at 5V (related to PrM parameter)	[PA4 to 50.0 bar] [PA4 to 725 psi]	11	Pr2
<b>oPr</b>	Pressure probe calibration	[-12.0 to 12.0 bar] [-174 to 174 psi]	0.0	Pr2
<b>ttE</b>	type of temperature probe	ntC(0) - PtM(1) - nCP(2)	PtM	Pr2
<b>otE</b>	Temperature probe calibration	[-12.0 to 12.0°C] [-21 to 21°F]	0,0	Pr2
<b>DIGITAL INPUTS</b>				
<b>i1P</b>	Free of voltage digital input polarity	CL; oP	cL	Pr2
<b>i1F</b>	Free of voltage digital input function	CCL; rL	CCL	Pr2
<b>d1d</b>	Digital input 1 (free of voltage) activation delay	0 to 255 min	0	Pr2
<b>i2P</b>	Main voltage digital input polarity	CL; oP	cL	Pr2
<b>i2F</b>	Main voltage digital input function	CCL; rL	CCL	Pr2
<b>d2d</b>	Digital input 2 (Main voltage) activation delay	0 to 255 min	0	Pr2
<b>ALARMS</b>				
<b>dAo</b>	Alarm delay after restarting regulation	0.0 to 42min 00s, res. 10s	10.0	Pr2
<b>tdA</b>	Type of alarm signalled by relay	ALL; SH; PrE; Di	ALL	Pr2
<b>bon</b>	Buzzer enabling	No; yES	n	Pr2
<b>tbA</b>	Alarm relay silencing	No; yES	n	Pr2
<b>LPL</b>	Lower pressure limit for superheat regulation (related to PrM parameter)	[PA4 to P20 bar] [PA4 to P20 psi]	-0.5	Pr2
<b>MoP</b>	Maximum operating pressure threshold (related to PrM parameter)	[LoP to P20 bar] [LoP to P20 psi]	11.0	Pr2
<b>LoP</b>	Minimum suction pressure limit (related to PrM parameter)	[PA4 to MoP bar] [PA4 to MoP psi]	-0.5	Pr2
<b>PHy</b>	Pressure alarm Hysteresis	[0.1 to 5.0 bar] [1 to 72 psi]	0.2	Pr2
<b>dML</b>	delta MoP-LoP	0 to 100%	5	Pr2
<b>MSH</b>	Maximum superheat alarm	[LSH to 80.0°C] [LSH to 176°F]	80.0	Pr2
<b>LSH</b>	Lowest superheat alarm	[0.0 to MSH°C] [0 to MSH°F]	2.5	Pr2
<b>SHY</b>	Superheat hysteresis	[0.1 to 25.5°C] [1 to 77°F]	0,5	Pr2
<b>SHd</b>	Superheat alarm signalling delay/ Restart regulation delay after MAX or Low superheat alarm	0 to 255 s	30	Pr2
<b>FrC*</b>	Fast recovery Constant	0÷100; 0 = Disabled	0	Pr2
<b>DISPLAY</b>				
<b>tdS</b>	Pressure filter	0-240s	5	Pr2
<b>tdt</b>	Temperature filter	0-240s	3	Pr2
<b>Lod</b>	Local display	SH; PEr; P1; P2	SH	Pr2
<b>CF</b>	Temperature measurement units	°C; °F	°C	Pr2
<b>PMu</b>	Pressure measurement unit	bAr; PSi	bAr	Pr2
<b>rES</b>	Resolution (only °C)	dE; in	dE	Pr2
<b>PrM</b>	Type of pressure (Absolute / relative)	rEL; AbS	rEL	Pr2
<b>CLP</b>	Cooling call percentage	Read only	---	Pr1
<b>tP1</b>	Temperature probe value	Read only	---	Pr1
<b>PPr</b>	Pressure probe value	Read only	---	Pr1
<b>tP2</b>	Temperature converted from pressure probe	Read only	---	Pr1
<b>SH</b>	Super heat value	Read only	---	Pr1
<b>STH</b>	Superheat set point valu	Read only	---	Pr1
<b>oPP</b>	Actual Opening percentage	Read only	---	Pr1
<b>d1S</b>	Free of voltage digital input state	Read only	---	Pr1
<b>d2S</b>	Main voltage digital input state	Read only	---	Pr1
<b>Adr</b>	Serial address	1 to 247	1	Pr2
<b>Mod</b>	Modbus type	Std; AdU	Std	Pr2
<b>Ptb</b>	Parameters map	---	-	Pr2
<b>rEL</b>	Release software	---	1.5	Pr2
<b>Pr2</b>	Second level menu	---	-	Pr1

\* Present only in specific part numbers

Dixell



Dixell S.r.l. - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY  
Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com

Control unit  
XEV 22D


Series EX valves


 Backup power  
EXD-PM


Parameter	JDK value	Parameter description
PASSPORT	321	Access password to enter level "PR2" - parameter setting
FtY		* Refrigerant: 47C=R407C, 134=R134a, 513=R513a, 404=R404A, 449=R449A, 410=R410A, 290=R290, CO2=R744
lip	1 s	Valve reaction delay (1...100s), 0=automatic adaptation, calculated according to the fluctuation of the SH superheat value (range 6...60s), 1=reaction is without delay
PEo	10%	Valve opening (0...100%) in case of probe error (until PEd time expires)
Ph.D	He	Valve closing delay in case of probe error (0...239s), 240s=permanently ON
tEU	bP	Stepper valve actuator type: UP=Unipolar, bP=Bipolar (EX series Alco)
pulse		* Expansion valve type: 11=EX4 to EX6, 12=EX7, 13=EX8, 14=EX3
OP	50%	Initial valve opening % (10...100%)
SFd	00 min 10 sec	The duration of the initial opening of the valve (0...42 min) after 10 s
days	3	Pilot duty, takes into account the time to reach the desired valve position, disabled for dty=10
MnF	100%	Maximum permissible opening of the valve (0...100%)
FoP	no	Fixed (fixed) valve opening (0...100%), for FoP=nU regulates normally
AMS	well	Adaptive overheating control, AMS=no (the controller uses the entered PID parameters), AMS=yES (the controller calculates and adapts the PID parameters automatically)
Ata	well	Automatically searches for minimum stable superheat (LSH). Atu=no/yES (LSH≥2K)
Pb	12	Proportionality band (0.1...50°C)
rS	0	Proportionality band shift (-12°C.... +12°C)
inC	180	Integration constant PI (0...255s)
dFc	2	PID derivative constant (0...255s)
tPP	420	* Type of installed pressure sensor: (420, 5V, LAN) 420=4...20mA, 5V=Ratiometric, LAN=signal comes from another XEV module
LPP	well	Transmitting the pressure value from the sensor via LAN (no, Y)
PA4	-1.0	* Pressure value at 4mA or 0V signal (-1.0... 20barg), PT5-07=-0.8, PT5-18=0, EWPA010=-1.0
P20	9.0	* Pressure value at 20mA or 5V signal (PA4... 50bar), PT5-07=7, PT5-18=18, EWPA010=9
oPr	0	Pressure sensor calibration (-12 ... 12.0bar)

\* Main parameters that must always be checked for the individual application


PAGE 1 OF 3	DESCRIPTION: <b>Default JDK settings for valves EX4...8, EWPA010, NTC 10k 3435</b>	APPLICATION SETTINGS: <b>9SET000782</b>	ROAR <b>2</b>
----------------	---	--	------------------

Parameter	JDK value	Parameter description
ttE	ntC	Temperature sensor type: PtM=Pt1000, ntC=NTC 10k (3435), CtC=NTC-US (3977)
* HlaOinrEit's steam m	ethers which0it is necessary	intOofanddlyi.bofyet...andthe so-calledrandand...etc...if1to2ac0and°C)
i1P	CL	Digital input 1 (potential-free): CL=active when closed, oP=active when open
i1F	CCL	Function of digital input 1: CCL=start regulation, rL=relay activation
d1d	0	Relay activation delay input 1 (0...255min) only when i1F=rL is set
i2p	CL	Digital input 2 (voltage): CL=active when switched on, oP=active when switched off
i2F	CCL	Function of digital input 2: CCL=control start, rL=relay activation
d2d	0	Relay activation delay input 2 (0...255min) only when i2F=rL is set
d.o.o	10:00 a.m	Alarm notification delay after the start of regulation (0 ... 42:00 min, after 10 s)
tdA	SH	Type of alarm signaled by relay switching (ALL, SH, PrE, di), PrE.. pressure alarm
LPL	- 0.2	Minimum limit suction pressure when regulating, range (PA4 to P20 barg)
Mop		* MOP value (barg) - limitation of the maximum evaporation temperature according to the application
LoP	1	* Minimum working suction pressure LOP (barg) – e.g. frost prevention according to the application
PHY	0.6	Hysteresis for ending the pressure alarm for LOP/MOP (0.1...5 bar)
dML	5	Valve closing/opening speed in %/1s for the duration of the MOP/LOP alarm
MSH	15	Alarm - high overheating (LSH ... 80K)
LSH	3	Low Overheat Alarm (K)
SHY	3	Hysteresis for terminating the low overheat alarm (0 ... 25.5K)
SHd	30	Delay for activating the low overheating alarm (0 ... 255s)
tdS	5	Time period for calculating the average pressure value (0 ... 240s)
tdt	3	Time period for calculating the average temperature value (0 ... 240s)
Ship	SH	Value shown on the display: SH=superheat (K), PEr=valve opening (%), P1=evaporator outlet temperature (°C), P2=evaporation pressure (barg)
CF	°C	Temperature measurement units used: °C, °F
PMU	bar	Units used for pressure measurement and display: bAr=bar, Psi=psi
rES	dE	Resolution (for temperature only): dE=tenths, in=integer
PrM	rEL	Pressure sensing and display mode: rEL=relative (barg), AbS=absolute (bara)
CLP		Displays the % of the cooling running time (according to the duration of the CCL signal) - read only
tP1		Displays the measured value (°C) of the temperature sensor - read only
PPr		Displays the measured value (barg) of the pressure sensor - read only
tP2		Displays the evaporation temperature (°C) (dew) calculated from the pressure - read only
SH		Displays the current superheat value (K) - read only

\* Main parameters that must always be checked for the individual application

PAGE 2 OF 3	DESCRIPTION: <b>Default JDK settings for valves EX4...8, EWPA010, NTC 10k 3435</b>	APPLICATION SETTINGS: <b>9SET000782</b>	ROAR <b>2</b>
----------------	---	--	------------------

Parameter	JDK value	Parameter description
STH		Displays the required (set) superheat value (K) – read only
OPP		Displays the current valve opening value (%) - read only
d1S		Displays the status of the i1F potential-free input contact
d2S		Displays the status of the i2F input voltage contact
Address	1	Identification address of the controller within the ModBUS network (1...247)
Mod	Std	ModBUS communication settings: Std=separate controller, AdU=connection to XWEB, it requires a special library for communication
Ptb	1	Revision number of the basic parameters set in the JDK (0...65535) - read only
rEL		Firmware version – read only
Pr2		Access to the second level of parameters, password=321 = see PAS parameter setting
StH	6	Value of desired superheat SET (4...24K)

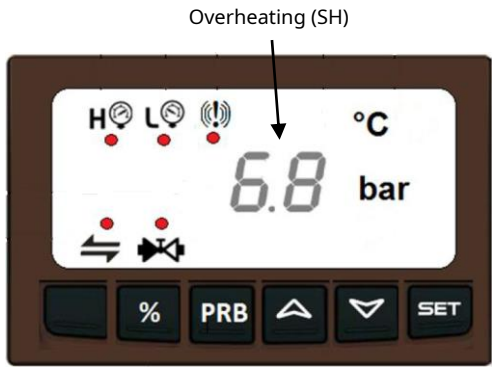

BASIC CONTROLS

	Unlock/lock the keyboard
	By pressing repeatedly, the CLP...d2S parameters are displayed
SET +	Entering Pr2 level parameter settings
<small>steed</small>	Selecting the "PAS" parameter, enter the password
SET	Displays the value by pressing   the value changes
SET	Press it again to confirm the setting
SET +	Termination of programming or a 30s delay

DESCRIPTION OF THE INDICATION ON THE FRONT PANEL OF THE REGULATOR

Character	ICE	Description of function
%	-	After pressing, the % valve opening will be displayed
PRB	-	The vapor pressure value is displayed
H	HE	Indicates that the MOP value has been exceeded
L	HE	Indicates that the LOP value has been exceeded
	HE	Indicates an overheating alarm

Character	ICE	Description of function
	OFF	The valve is fully closed
	Flashes	The valve regulates
	HE	The valve is fully open
	Flashes	RS485 data communication is active

\* Main parameters that must always be checked for the individual application

ORDER No/ORDER: <b>ON</b>	UNIT: -----	SETUP BY: T. Menšík	DATE/DAYS: 6/5/2021	DEFAULT JDK: 9SET000782	ROAR 2
PAGE 3 OF 3	DESCRIPTION: <b>Default JDK settings for valves EX4...8, EWPA010, NTC 10k 3435</b>			APPLICATION SETTINGS: <b>9SET000782</b>	ROAR <b>2</b>